

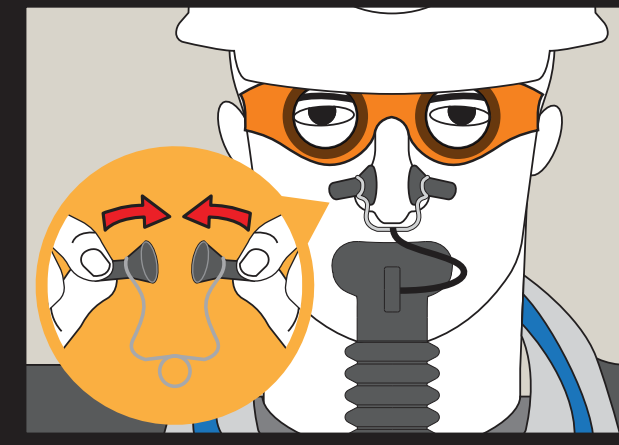
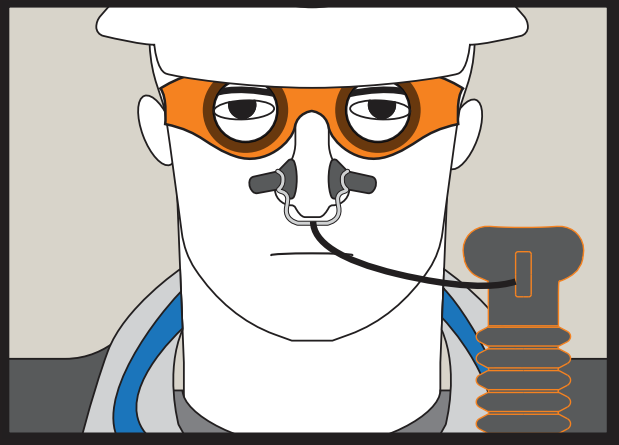
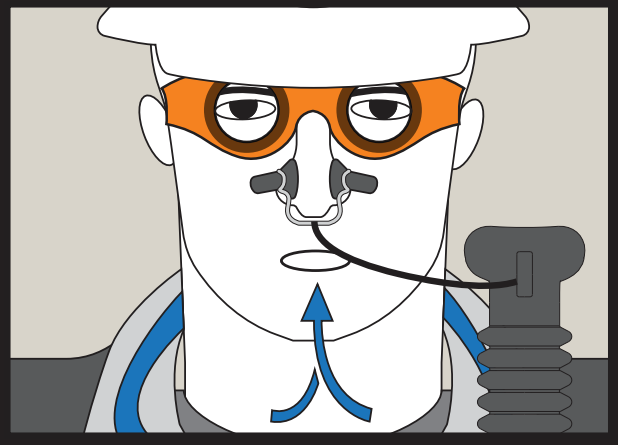
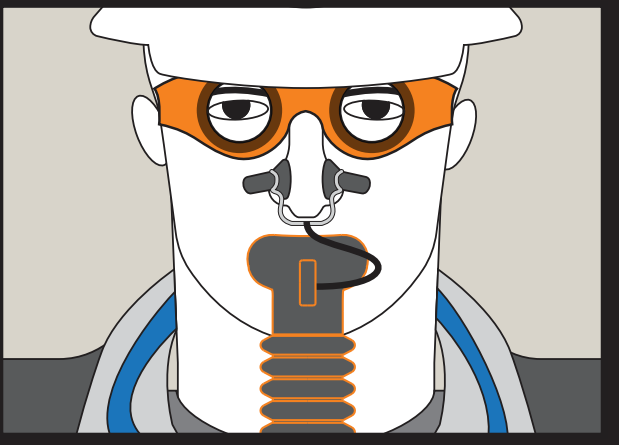
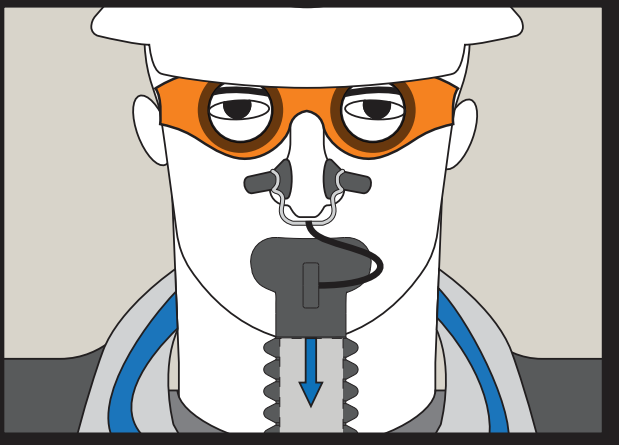
SYB-30 DONNING PROCEDURE



<p>1. Break Tamper Tabs</p>  <p>Lift straight up on both tamper tabs to break them.</p>	<p>2. Remove Pull-Pin</p>  <p>Pull pin straight out. Security bands should fall away.</p>	<p>3. Remove Top Case</p>  <p>Pull top case upward and discard.</p>
<p>4. Remove Device & Loop Around Neck</p>  <p>Pull SYB-30 up using the blue neck strap. Loop strap around neck. Goggles on the right.</p>	<p>5. Deploy Starter Oxygen</p>  <p>Keep plug in mouthpiece. Pull orange oxygen actuator tag firmly upward.</p>	<p>6. Insert Mouthpiece</p>  <p>Spit out gum or tobacco. Remove from plug and place mouthpiece between lips and teeth. Exhale into mouthpiece.</p>
<p>7. Apply Nose Clips</p>  <p>Pull nose clip apart. Clamp nose shut. Breathe normally.</p>	<p>8. Apply Goggles</p>  <p>Pull goggles from top of unit. Put goggles on (glasses may be worn over).</p>	<p>9. Adjust Straps</p>  <p>Tighten neck strap as needed. Secure chest strap. Unit should rest high on chest without pulling on mouthpiece.</p>

SYB-30 MANUAL START

Use Manual Start If Starter Oxygen Is Lost
Fill Breathing Bag with Breath

<p>1. Clamp Nose Shut</p>  <p>Apply nose clips.</p>	<p>2. Remove Mouthpiece</p>  <p>Take mouthpiece out of mouth.</p>	<p>3. Inhale Deeply</p> 	<p>4. Replace Mouthpiece</p>  <p>Put mouthpiece back in mouth.</p>	<p>5. Exhale Into Mouthpiece</p>  <p>Repeat 3 - 6 times until breathing bag inflates. Once inflated keep mouthpiece in mouth. Breathe slowly and steadily.</p>
--	---	---	--	--

SYB-30 CHANGEOVER

You May Need More Than One SYB-30
Changeover When Breathing Becomes Uncomfortable

<p>1. Slide First SYB-30 to the Left</p> 	<p>2. Open Second SYB-30</p> 	<p>3. Hang Second Unit Around Neck</p> 	<p>4. Pull Starter Tag on Second SYB-30</p> 	<p>5. Take Deep Breath from First Unit</p> 
<p>6. Pull Second SYB-30 Mouthpiece from Plug</p> 	<p>7. Remove Mouthpiece from First SYB-30</p> 	<p>8. Insert Mouthpiece from Second SYB-30</p> 	<p>9. Unclip Nose Clip from First Unit (Keep Nose Clamped)</p> 	<p>10. Drop First SYB-30 After Second is Working</p> 

MAKING YOUR SYB-30 LAST LONGER

- Stay calm — rapid breathing uses more oxygen
- Walk steadily — do not run
- Keep mouthpiece sealed tightly
- Do not remove nose clip or mouthpiece
- Do not talk while using the SYB-30
- Heat and breathing resistance are normal
- Do not compress or damage the breathing bag
- Use SYB-30 for escape only

For full details, refer to the SYB-30 User Guide. This poster does not replace the need for training. Colors of components shown may vary.